


### Installing Screen Program in PanelView 900/1000 With a Flash Card

1. Turn off power to PanelView.
2. Insert flash card in back of PanelView (will only go in one way).
3. Turn on power to PanelView.
4. If the screen does not come up "Configuration Mode" press the left and right arrow keys at the same time.
5. Press ARROW key up or down to highlight memory card.
6. Press ENTER.
7. Press F2 (Restore from card).
8. Press F2 (Continue).
9. After the screen shows 100% complete and the main screen comes up, press the left and right arrow keys to return to "Configuration Mode".
10. Use the arrow keys to highlight memory card, then press ENTER.
11. Press F8 (Disconnect card).
12. Press F2 (Continue).
13. Remove card when screen displays "Remove Card".
14. Remove the flash card and store it in the original plastic box.
15. If the Run screen does not appear and the screen displays "Configuration Mode" then press F2 (Run Mode).



Flash Card (shown actual size)

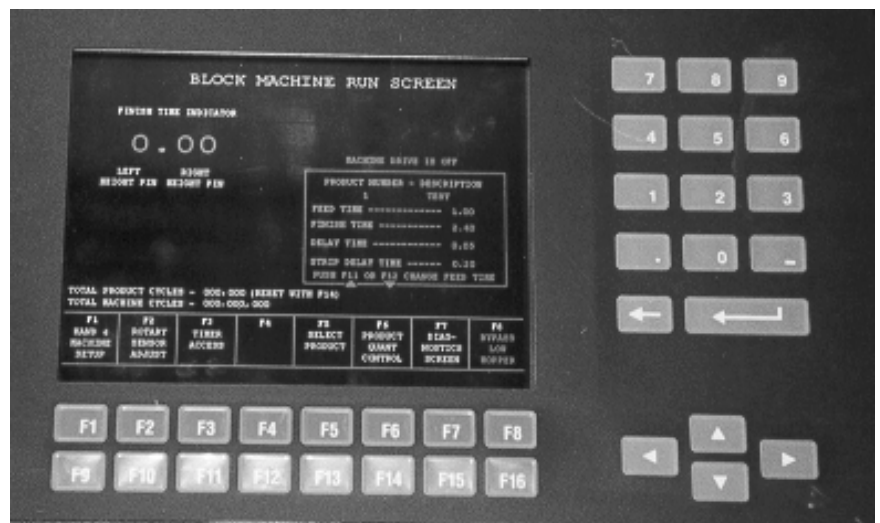

PanelView Screen

# SAFETY BULLETIN

This notice is issued to advise you that some previously accepted shop practices may not be keeping up with changing Federal and State Safety and Health Standards. Your current shop practices may not emphasize the need for proper precautions to insure safe operation and use of machines, tools, automatic loaders and allied equipment and/or warn against the use of certain solvents or other cleaning substances that are now considered unsafe or prohibited by law. Since many shop practices may not reflect current safety practice and procedures, particularly with regard to the safe operation of equipment, it is important that you review your practices to ensure compliance with Federal and State Safety and Health Standards.

## IMPORTANT

**The operation of any machine or power-operated device can be extremely hazardous unless proper safety precautions are strictly observed. Observe the following safety precautions:**

**Always** be sure proper guarding is in place for all pinch, catch, shear, crush and nip points.

**Always** be sure that all personnel are clear of the equipment before starting it.

**Always** be sure the equipment is properly grounded.

**Always** turn the main electrical panel off and lock it out in accordance with published lockout/tagout procedures prior to making adjustments, repairs, and maintenance.

**Always** wear appropriate protective equipment such as safety glasses, safety shoes, hearing protection and hard hats.

**Always** keep chemical and flammable material away from electrical or operating equipment.

**Always** maintain a safe work area that is free from slipping and tripping hazards.

**Always** be sure appropriate safety devices are used when providing maintenance and repairs to all equipment.

**Never** exceed the rated capacity of a machine or tool.

**Never** modify machinery in any way without prior written approval of the Besser Engineering Department.

**Never** operate equipment unless proper maintenance has been regularly performed.

**Never** operate any equipment if unusual or excessive noise or vibration occurs.

**Never** operate any equipment while any part of the body is in the proximity of potentially hazardous areas.

**Never** use any toxic flammable substance as a solvent cleaner.

**Never** allow the operation or repair of equipment by untrained personnel.

**Never** climb or stand on equipment when it is in operation.

It is important that you review Federal and State Safety and Health Standards on a continual basis. All shop supervisors, maintenance personnel, machine operators, tool operators, and any other person involved in the setup, operation, maintenance, repair or adjustment of Besser-built equipment should read and understand this bulletin and Federal and State Safety and Health Standards on which this bulletin is based.